


Electric Remote Control / Deadman Western Technology


Western Tech 2 Wire and 3 Wire Repairable Electric Remote Control / Deadman

Item #	Part #	Description
#1	WT1001-REP-2	Repairable Electric Deadman Remote Control Switch (2—wire) Ball & Chain, WT1102 included.
#2	WT1001-REP-3	Repairable Electric Deadman Remote Control Switch (3-wire) WT1102 Ball & Chain included
REPAIR KITS		
	WT1001-KIT	Kit includes 2 position switch, 4' of 2 wire control cord with ring lugs installed, terminal screws and assembled jumper.
	WT1001-KIT-3	Kit includes 3 position switch, 4" of 3 wire control cord with ring lugs installed and terminal screws.
#3	WT1102	Ball & Chain
#4	WT3101	Toggle Boot
#5	WT1001-CAP	Red Cap

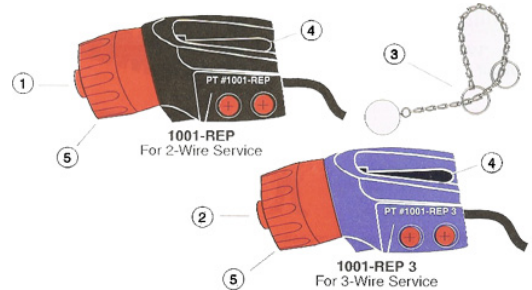

Western Technology Electric 2 Position Non-repairable

Item #	Part #	Description
#1	WT1001-4	Sealed Electric Deadman Remote Control (2-Position "ON" switch) with 4' cord and replaceable Toggle Switch Boot WT3101 Ball & Chain included WT1102
#2	WT3101	Toggle Switch Boot-Electric
#3	WT3113-1	Cord Connector – 3 Part – Strain Relief Type 1/2"
	WT3111	Hose Clamp – Screw (not shown)
#4		Power Cord 16/2 SO
#5	WT1102	Ball & Chain

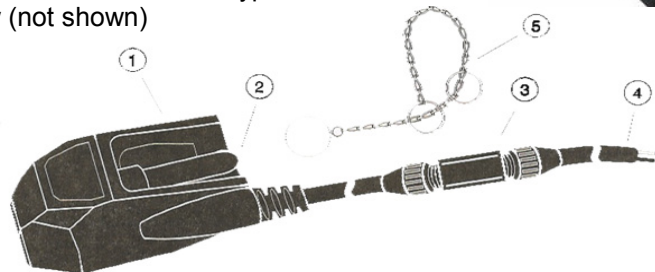

Western Technology Wrist-Ez Repairable Electric Deadman

	1004HC	Wrist-Ez Repairable Electric Deadman Remote Control Switch - 2 Wire (wire is 4ft of 14.2 SOOW)
	1004HC-3	Wrist-Ez Repairable Electric Deadman Remote Control Switch - 3 Wire (wire is 4ft of 14.3 SOOW)

